



Krups 963 Power Cord Replacement

Replacing a damaged or non-function power cord.

Written By: Wyatt Hall



INTRODUCTION

No prior knowledge needed! Be sure to unplug the device before beginning this guide to avoid electrical shock and damage to yourself and the device.



TOOLS:

- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Removing Bottom Screws




- ⚠ Make sure the device is unplugged before continuing.
- Use a Phillips size 2 screwdriver to remove the four 12mm screws found on the bottom of the machine.

Step 2



- Remove the single black Phillips size 0 10mm length screw on the back of the machine.

Step 3

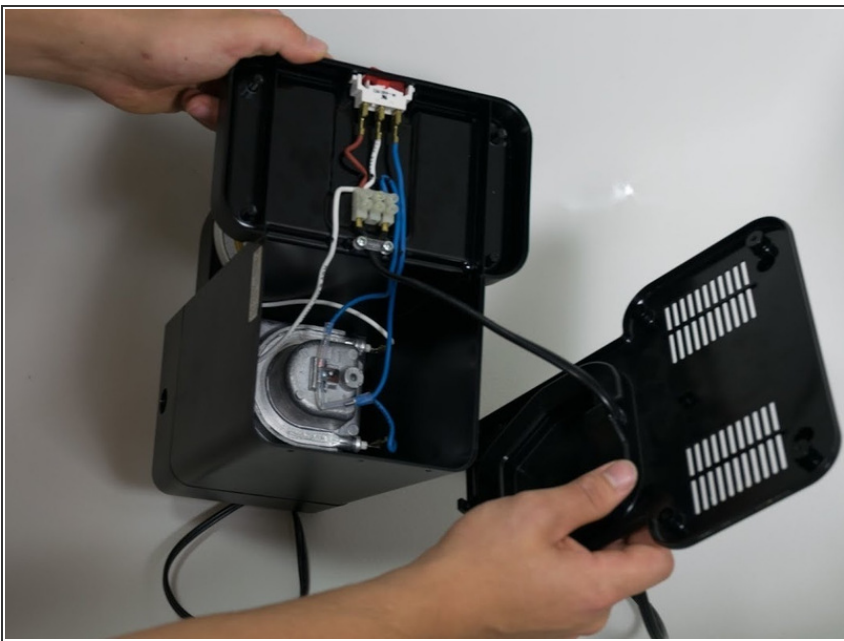

- Remove the bottom cover from the machine and slide it down the power cord.

Step 4 — Power Cord



- Use the PH2 (or similar) screw driver to remove the two 12mm screws holding the clear restraining brace.
- Remove the restraining brace from the machine base.

Step 5



- Use a 2.0 flat head (or similar) screw driver to loosen the screw holding the power cord in.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-05 07:50:28 AM.